

axial[®]
www.axialracing.com

1/10th SCALE READY-TO-RUN

SCX10™ II DEADBOLT™



AXI03025

**INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'UTILISATION
MANUALE DI ISTRUZIONI**

Scan the QR code and select the Manuals and Support quick links from the product page for the most up-to-date manual information.

Scannen Sie den QR-Code und wählen Sie auf der Produktseite die Quicklinks Handbücher und Unterstützung, um die aktuellsten Informationen zu Handbücher.

Scannez le code QR et sélectionnez les liens rapides Manuals and Support sur la page du produit pour obtenir les informations les plus récentes sur le manuel.

Scannerizzare il codice QR e selezionare i Link veloci Manuali e Supporto dalla pagina del prodotto per le informazioni manuali più aggiornate.

HORIZON[®]
H O B B Y

NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, LLC. For up-to-date product literature, visit horizonhobby.com or towerhobbies.com and click on the support or resources tab for this product.

MEANING OF SPECIAL LANGUAGE

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND a little or no possibility of injury.

 **WARNING:** Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by Horizon Hobby, LLC. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

Age Recommendation: Not for children under 14 years. This is not a toy.

SAFETY PRECAUTIONS AND WARNINGS

As the user of this product, you are solely responsible for operating in a manner that does not endanger yourself and others or result in damage to the product or property of others.

This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe distance in all directions around your model as this margin will help avoid collisions or injury.

- Never operate your model with low transmitter batteries.
- Always operate your model in open spaces away from full-size vehicles, traffic and people.
- Never operate the model in the street or in populated areas for any reason.
- Carefully follow the directions and warnings for this and any optional support equipment (chargers, rechargeable battery packs, etc.) you use.
- Keep all chemicals, small parts and anything electrical out of the reach of children.
- Never lick or place any portion of the model in your mouth as it could cause serious injury or even death.
- Exercise caution when using tools and sharp instruments.
- Take care during maintenance as some parts may have sharp edges.
- Immediately after using your model, do NOT touch equipment such as the motor, electronic speed control and battery, because they generate high temperatures. You may burn yourself seriously touching them.
- Do not put fingers or any objects inside rotating and moving parts, as this may cause damage or serious injury.
- Always turn on your transmitter before you turn on the receiver in the car. Always turn off the receiver before turning your transmitter off.
- Keep the wheels of the model off the ground when checking the operation of the radio equipment.

 **WARNING AGAINST COUNTERFEIT PRODUCTS:** Always purchase from a Horizon Hobby, LLC authorized dealer to ensure authentic high-quality Spektrum product. Horizon Hobby, LLC disclaims all support and warranty with regards, but not limited to, compatibility and performance of counterfeit products or products claiming compatibility with DSM® or Spektrum technology.

TABLE OF CONTENTS

Water-resistant Vehicle with Waterproof Electronics	3	vehicle maintenance	9
Box Contents.....	4	Firma 40A Brushed ESC	10
Required Equipment	4	Gear Ratios.....	10
recommended tools.....	4	Troubleshooting.....	11
Getting started checklist.....	5	Limited Warranty.....	12
Vehicle parts	5	Warranty and Service Contact Information	12
Charge the vehicle battery	6	FCC Information.....	13
Install the transmitter batteries.....	6	IC Information.....	13
Transmitter functions	6	Compliance Information for the European Union	13
Binding.....	6	Exploded Views.....	50
SLR300 Receiver.....	7	Parts Lists.....	57
Adjusting the Vehicle battery tray.....	7	Electronics	59
Install the vehicle battery	8	Recommended Parts.....	60
Range-checking the radio system	9	Optional Parts.....	60

WATER-RESISTANT VEHICLE WITH WATERPROOF ELECTRONICS

Your new Horizon Hobby vehicle has been designed and built with a combination of waterproof and water-resistant components to allow you to operate the product in many “wet conditions,” including puddles, creeks, wet grass, snow and even rain.

While the entire vehicle is highly water-resistant, it is not completely waterproof and your vehicle should NOT be treated like a submarine. The various electronic components used in the vehicle, such as the Electronic Speed Control (ESC), servo(s) and receiver are waterproof, however, most of the mechanical components are water-resistant and should not be submerged.

Metal parts, including the bearings, hinge pins, screws and nuts, as well as the contacts in the electrical cables, will be susceptible to corrosion if additional maintenance is not performed after running in wet conditions. To maximize the long-term performance of your vehicle and to keep the warranty intact, the procedures described in the “Wet Conditions Maintenance” section below must be performed regularly if you choose to run in wet conditions. If you are not willing to perform the additional care and maintenance required, then you should not operate the vehicle in those conditions.

 **CAUTION:** Failure to exercise caution while using this product and complying with the following precautions could result in product malfunction and/or void the warranty.

GENERAL PRECAUTIONS

- Read through the wet conditions maintenance procedures and make sure that you have all the tools you will need to properly maintain your vehicle.
- Not all batteries can be used in wet conditions. Consult the battery manufacturer before use. Caution should be taken when using Li-Po batteries in wet conditions.
- Most transmitters are not water-resistant. Consult your transmitter’s manual or the manufacturer before operation.
- Never operate your transmitter or vehicle where lightning may be present.
- Do not operate your vehicle where it could come in contact with salt water (ocean water or water on salt-covered roads), contaminated or polluted water. Salt water is very conductive and highly corrosive, so use caution.

- Even minimal water contact can reduce the life of your motor if it has not been certified as water-resistant or waterproof. If the motor becomes excessively wet, apply very light throttle until the water is mostly removed from the motor. Running a wet motor at high speeds may rapidly damage the motor.
- Driving in wet conditions can reduce the life of the motor. The additional resistance of operating in water causes excess strain. Alter the gear ratio by using a smaller pinion or larger spur gear. This will increase torque (and motor life) when running in mud, deeper puddles, or any wet conditions that will increase the load on the motor for an extended period of time.

WET CONDITIONS MAINTENANCE

- Drain any water that has collected in the tires by spinning them at high speed. With the body removed, place the vehicle upside down and pull full throttle for a few short bursts until the water has been removed.



CAUTION: Always keep hands, fingers, tools and any loose or hanging objects away from rotating parts when performing the above drying technique.



- Remove the battery pack(s) and dry the contacts. If you have an air compressor or a can of compressed air, blow out any water that may be inside the recessed connector housing.
- Remove the tires/wheels from the vehicle and gently rinse the mud and dirt off with a garden hose. Avoid rinsing the bearings and transmission.

NOTICE: Never use a pressure washer to clean your vehicle.




- Use an air compressor or a can of compressed air to dry the vehicle and help remove any water that may have gotten into small crevices or corners.
- Spray the bearings, drive train, fasteners and other metal parts with a water-displacing light oil. Do not spray the motor.
- Let the vehicle air dry before you store it. Water (and oil) may continue to drip for a few hours.
- Increase the frequency of disassembly, inspection and lubrication of the following:
 - Front and rear axle hub assembly bearings.
 - All transmission cases, gears and differentials.
 - Motor—clean with an aerosol motor cleaner and re-oil the bushings with lightweight motor oil.

BOX CONTENTS

- Spektrum™ SLT2 2 Channel 2.4GHz Transmitter (SPMRSLT200F)
- SCX10™ II Deadbolt™ RTR
 - 35T Electric Motor (DYNS1216)
 - 40A Smart Brushed ESC (SPMXSE1040)
 - Spektrum SLT® 3 Channel Receiver (SPMSLR300)
 - Water Proof Metal Gear Surface Servo, 23T (SPMS614)
 - (4) AA Alkaline batteries

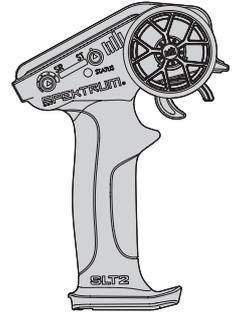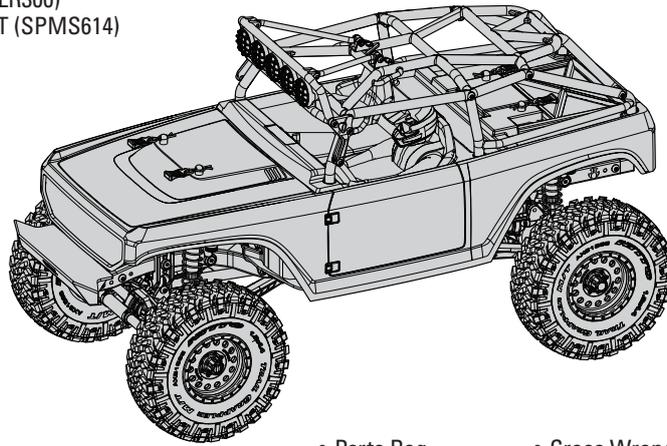


- Parts Bag
- Cross Wrench
- (4) AA Alkaline batteries

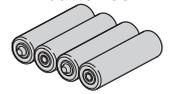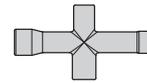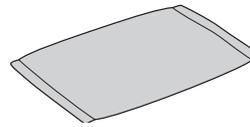


REQUIRED EQUIPMENT

- 2-3S Standard or "Shorty" LiPo Battery
- OR**
- 5-9 Cell NiMH/NiCd battery
(IC3® Connector Required)






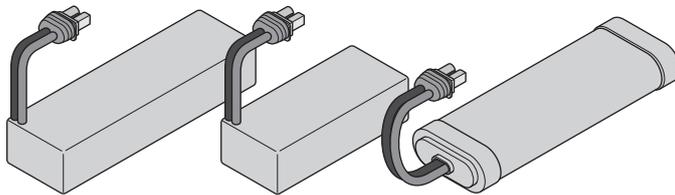


- Battery charger compatible with the chosen vehicle battery type

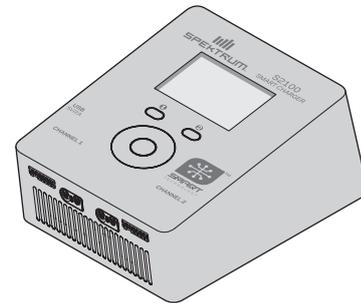

RECOMMENDED TOOLS

- Hex Drivers (1.5, 2.0, 2.5mm)
- Hobby Knife
- Side Cutter
- Curved Scissors
- Long-nose Plier

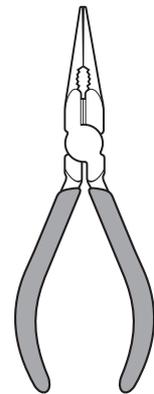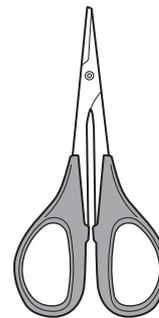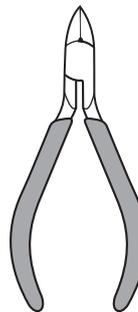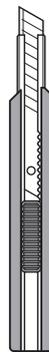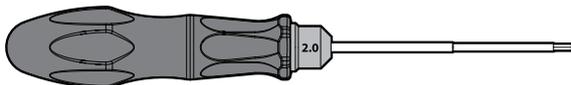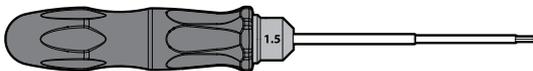


GETTING STARTED CHECKLIST

Read the manual
Familiarize yourself with the vehicle and its components
Check all screws, especially the driveshaft setscrews, for tightness from the factory
Charge the vehicle battery
Install 4 AA batteries in the transmitter

Power on the transmitter
Install the vehicle battery in the vehicle
Check for proper function of the throttle and steering
Range check the radio system
Drive the vehicle, challenge yourself and have FUN!
Perform any necessary vehicle maintenance


VEHICLE PARTS

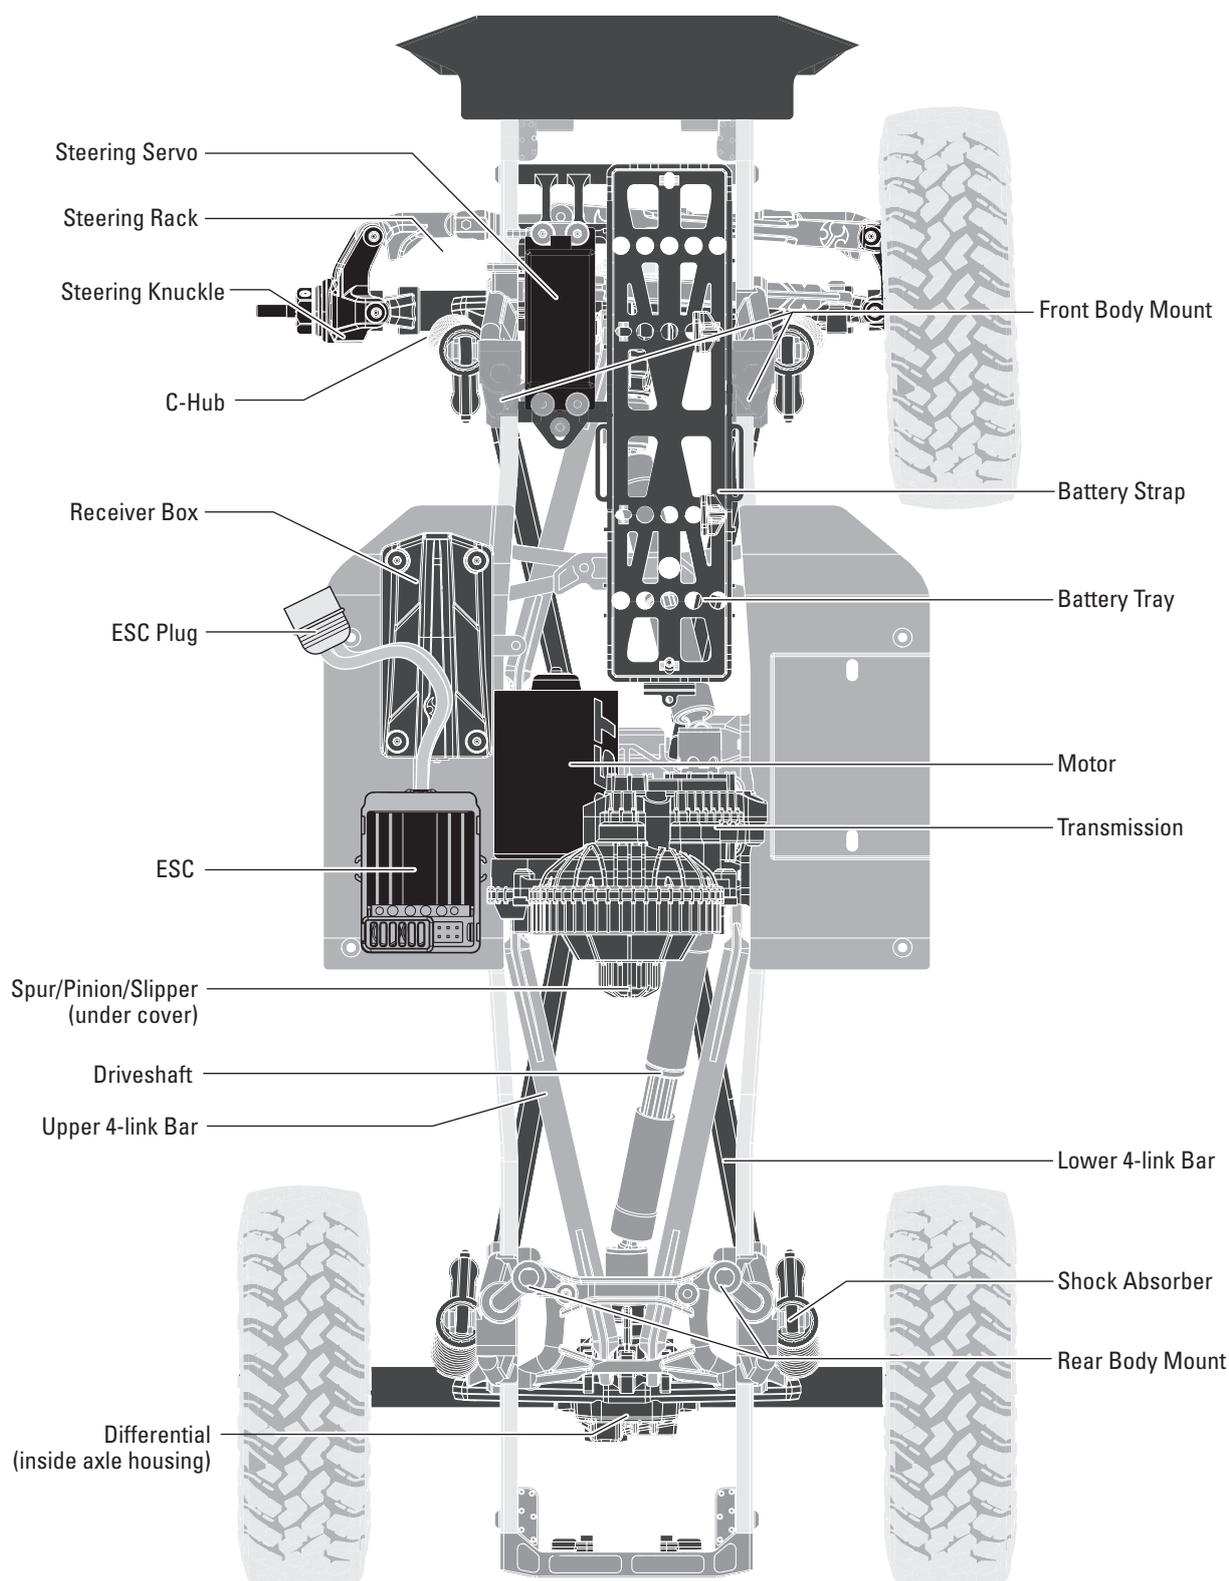

CHARGE THE VEHICLE BATTERY

Follow the manufacturer's directions for your charger to properly charge the vehicle battery.

CAUTION: Only use chargers designed to charge the chosen battery type. Using an incorrect charger or incorrect charger settings could cause the battery to catch fire or explode.

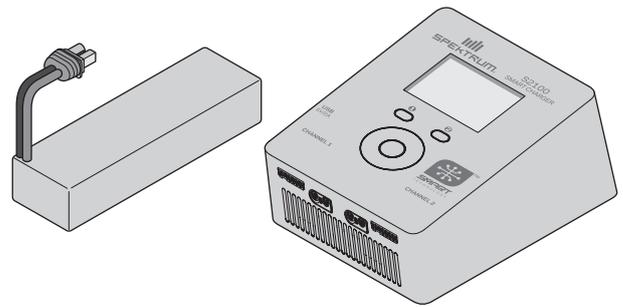

INSTALL THE TRANSMITTER BATTERIES


This transmitter requires 4 AA batteries.

1. Remove the battery cover from the transmitter.
2. Install the batteries as shown.
3. Install the battery cover.


CAUTION: NEVER remove the transmitter batteries while the model is powered on. Loss of model control, damage, or injury may occur.

CAUTION: If using rechargeable batteries, charge only rechargeable batteries. Charging non-rechargeable batteries may cause the batteries to burst, resulting in injury to persons and/or damage to property.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to national regulations.

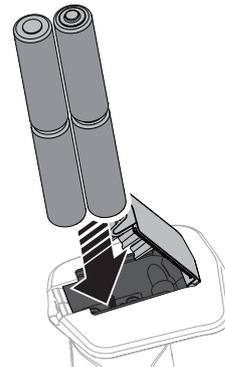

TRANSMITTER FUNCTIONS

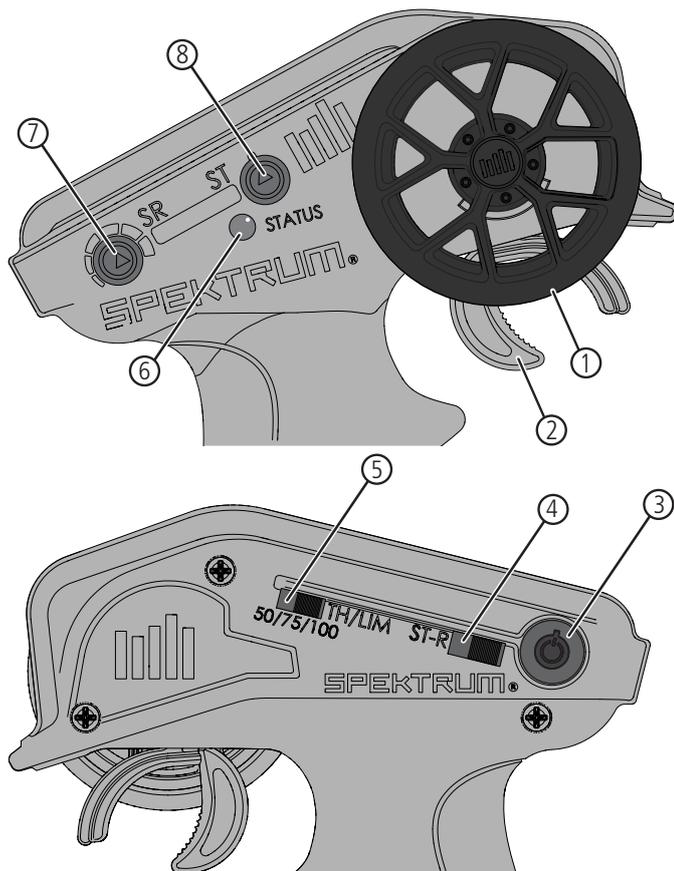

- 1. Steering Wheel** Controls direction (left/right) of the model
- 2. Throttle Trigger** Controls speed and direction (forward/brake/reverse) of the model
- 3. Power Button** Turns the power on/off
- 4. Steering (ST-R) Servo Reversing** Reverses the steering channel
- 5. Throttle Limit** Limits throttle output to 50/75/100%
Select 50% or 75% for less experienced drivers or when you are driving the vehicle in a small area
- 6. Indicator Lights**
Solid red light— Indicates radio connectivity and adequate battery power
Flashing red light— Indicates the battery voltage is critically low. Replace the batteries
- 7. Steering Rate Adjusts the steering end points**
- 8. Steering Trim** Adjusts the steering center point

BINDING

Binding is the process of programming the receiver to recognize the GUID (Globally Unique Identifier) code of a single specific transmitter. **The transmitter and receiver are bound at the factory.** If you need to rebind, follow the instructions below:

1. Insert the bind plug into the bind port of the receiver.
2. Connect a fully charged battery to the ESC.
3. Power on the ESC
4. Power ON the transmitter. The receiver's red LED will turn solid when the bind is successful.
5. Power OFF the ESC to save the settings.

6. Power OFF the transmitter.
7. Remove the bind plug and store for later use. The bind plug should not be installed while driving.

You must rebind when binding the receiver to a different transmitter.

NOTICE: Do not attempt to bind the transmitter and receiver if there are other compatible transmitters in bind mode within 400 feet. Doing so may result in unexpected binding.

SLR300 RECEIVER




SPECIFICATIONS

Type	3 Ch Receiver SLT
Dimensions (L x W x H)	33 x 20 x 13mm
Antenna Length	90mm
Channels	3
Weight	6g
Band	2.4GHz
Voltage Range	3.5-9.6V
Bind Type	Bind plug


ADJUSTING THE VEHICLE BATTERY TRAY





AX31373
M2.6x8mm x3

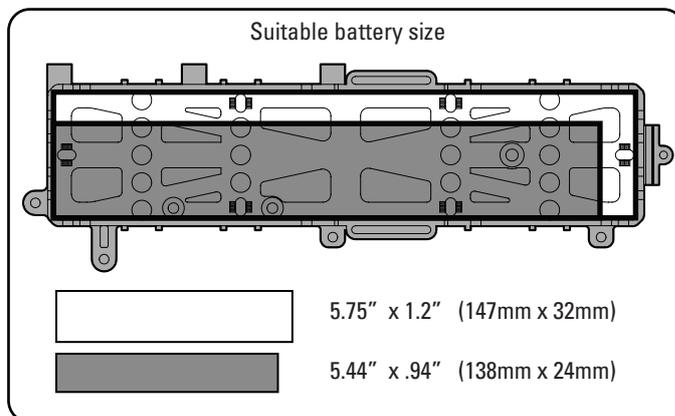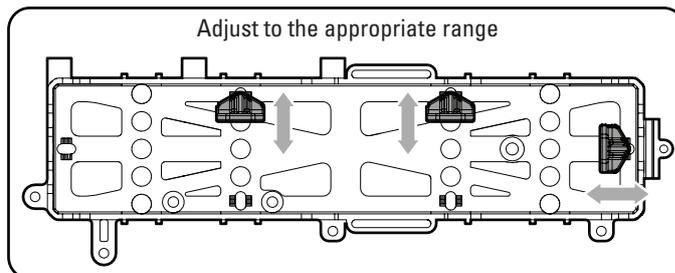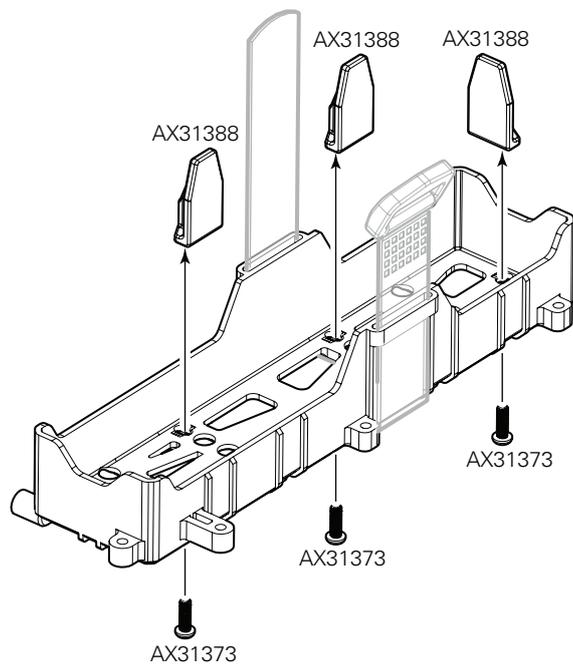

INSTALL THE VEHICLE BATTERY

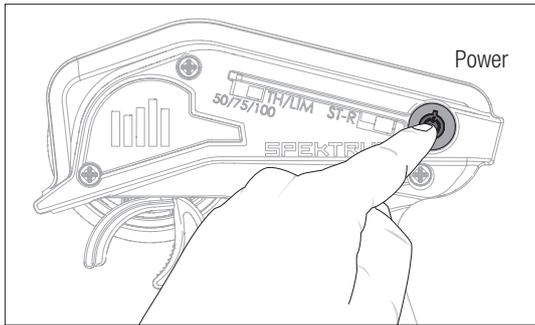

1. Power on the transmitter.
2. Remove the four body clips from the body.
3. Lift the body from the chassis.
4. Place the battery in the battery tray. The battery tray length may be adjusted to fit the battery as described in the previous section.

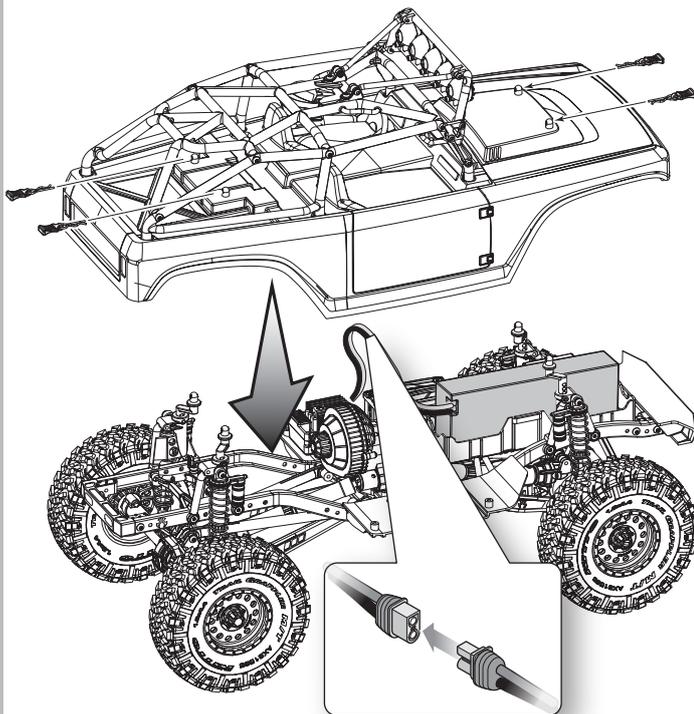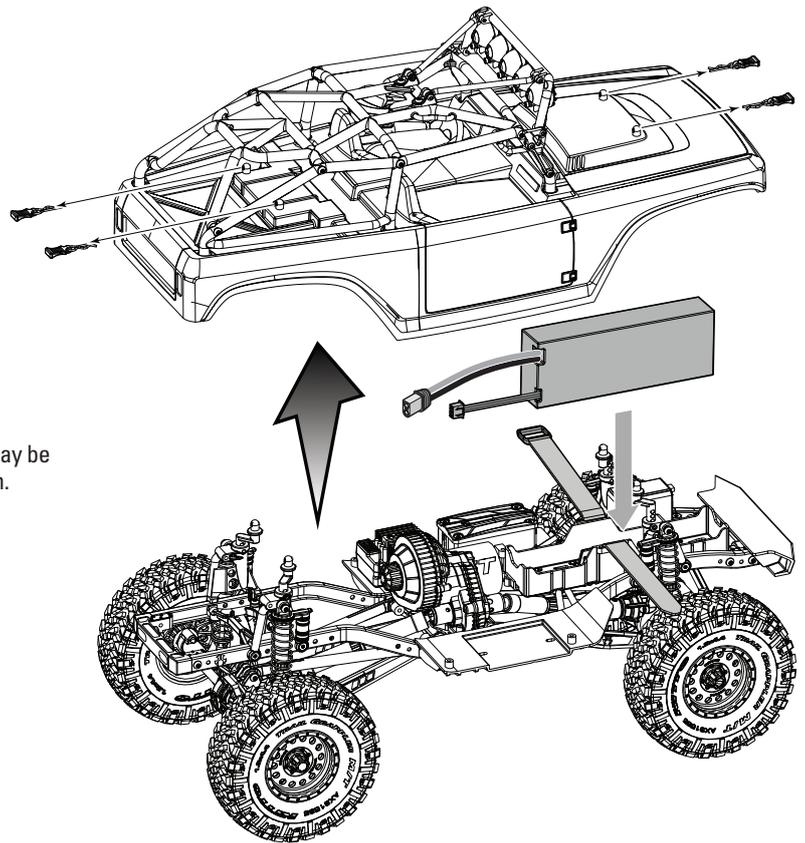

5. Secure the battery to the tray with the hook and loop strap.
6. Connect the battery to the ESC.
7. Re-install the body and four body clips to the chassis.

NOTICE: Always disconnect the battery from the ESC before powering off the transmitter. Loss of vehicle control may result.

RANGE-CHECKING THE RADIO SYSTEM



The radio system should be checked before operating the vehicle to ensure proper operation and adequate range.

1. Turn on the transmitter.
2. Connect the battery in the vehicle.
3. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
4. Walk away until you are at the maximum planned operating distance from the vehicle.
5. Turn the steering wheel side to side and operate the throttle, both forward and reverse, checking for any erratic behavior.
6. If any erratic behavior is exhibited, DO NOT operate the vehicle. Call customer service for assistance.




VEHICLE MAINTENANCE


Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

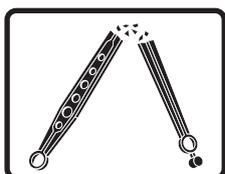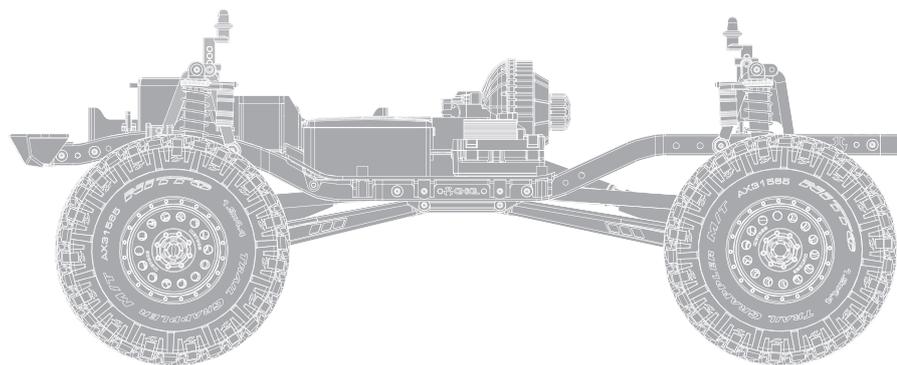


Replace any noticeable bent or broken parts

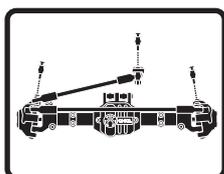


Check for wear on the ball joints in the steering and suspension links (replace if necessary)

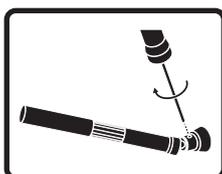


Check driveshaft set screws and apply thread locking compound if necessary

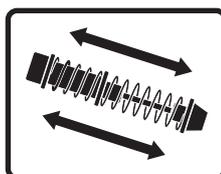


Inspect shock absorbers for smooth damped operation

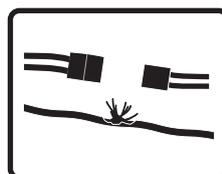


Check for any loose connections or frayed wiring

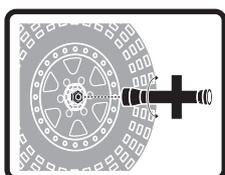


Check the wheel nuts for tightness

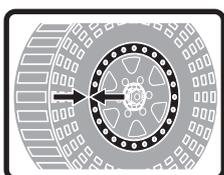


Ensure the wheel beads are still firmly bonded around the entire circumference of the rim

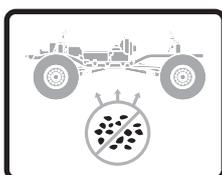

Keep the chassis free of dirt and debris

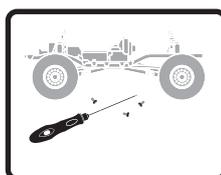


Check for loose screws on the chassis, especially the knuckle, C-hub and axle lockout screws

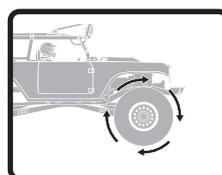


Check the driveline for smooth, bind free operation




If applicable, check the slipper clutch for proper operation

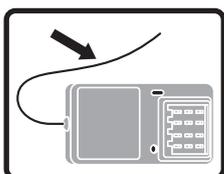


Check the receiver antenna for damage

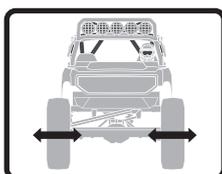

Check the steering operation for any binding


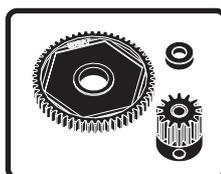


Inspect the spur and pinion gears for damage

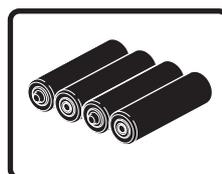

Replace the transmitter batteries when indicated by the transmitter, as described in the Transmitter Functions section

FIRMA 40A BRUSHED ESC

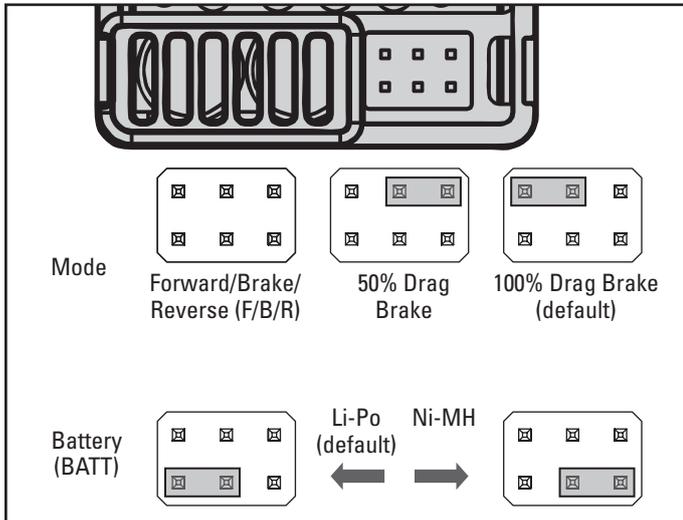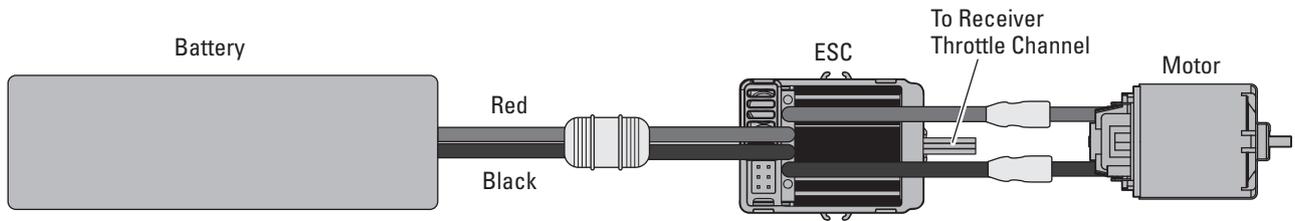

SPECIFICATIONS	
Type	Brushed
Constant/Peak	40A/180A
Resistance	0.002 Ohms
Function	Forward/Brake/Reverse, Forward/Brake, Forward/Reverse (Crawler Mode)
Vehicle Type	1/10 on-road and off-road; 1/10 rock crawler
Operation	Proportional forward, proportional reverse with braking delay, Crawler Mode
Battery Type/Input Voltage	2-3 cell Li-Po/Li-Fe; 5-9 cell Ni-MH/Ni-Cd
Motor Type	2S Li-Po down to 12T; 3S Li-Po down to 18T
BEC Output	6V/3A
Dimensions	46.5mm x 34mm x 28.5mm (1.8 x 1.3 x 1.1 in)
Weight	70g (2.5 oz)
Battery Connector	IC3™ connector

SOUND INDICATOR	
OPERATION	SOUND
Ni-MH/Ni-CD Battery	1 Short Beep
2S Li-Po Battery	2 Short Beeps
3S Li-Po Battery	3 Short Beeps
ESC Ready	1 Long Beep

SETUP

Throttle calibration should not be needed out of the box. However, in order to make the throttle range of different transmitters, the calibration of the ESC is necessary:

- Mount the ESC in an area that is well ventilated and isolated from vibration and shock.
- Connect the ESC motor wires to the motor red-to-red and black-to-black.
- Plug the receiver into the throttle channel of the receiver.
- Before plugging the battery into the ESC, make sure your transmitter is on and the throttle trim is set to zero.
- Connect the battery to the ESC. The vehicle will be powered on when the battery is connected.

CAUTION: Keep all body parts and loose clothing away from any moving parts while the battery is connected to the ESC.

CAUTION: Always connect the ESC only to a proper power source that has the correct voltage and polarity. Incorrect voltages or reversed polarity will damage the ESC. Damage to the ESC caused by improper voltage or polarity is not covered under warranty.

- Test forward and reverse control using the transmitter.

TO CALIBRATE THE ESC:

- Power the transmitter on and set the throttle control to neutral.
- Connect the battery to the ESC and wait 3 seconds to let the ESC initiate a self-test and automatic throttle calibration.
- The ESC is ready to run when a long beep sound is emitted from the motor.
- Always disconnect the battery when the vehicle is not in use.

IMPORTANT: The LiPo cut-off is set to "ON" and the drag brake is set to 100% from the factory.

GEAR RATIOS

SCX10 II SPUR/PINION GEAR RATIO CHART - LCX TRANSMISSION

Pinion	12	13	14	15	16	17	18
56 Tooth Spur	45.5	42	39	36.4	34.13	32.12	30.33
60 Tooth Spur	48.75	45	41.79	39	36.56	Not Available	

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The system will not connect	Your transmitter and receiver are too close together	Move transmitter 8 to 12 feet away from receiver
	You are near metal objects	Move to an area with less metal
	The receiver is bound to a different model memory	Make sure the correct model memory is active in your transmitter
	Your transmitter was placed into bind mode and is no longer bound to your receiver	Rebind your transmitter and receiver, and then re-calibrate
The receiver goes into failsafe a short distance away from the transmitter	Check for damage on the receiver antenna	Make sure your receiver antenna is protected and located as high as practical Replace the receiver or contact Horizon Product Support
	Low receiver battery voltage. If the battery voltage is low, it may drop below 3.5V momentarily, causing the receiver to brown-out, then reconnect	Charge the receiver or vehicle battery. Spektrum receivers require at least 3.5V to operate
The receiver stops responding during operation	Loose or damaged wires or connectors between battery and receiver	Check the wires and connection between the battery and receiver. Repair or replace wires and/or connectors
	Batteries are not installed properly in the transmitter	Ensure the transmitter batteries are properly installed
Vehicle does not move	Weak or no battery in the vehicle	Install a freshly charged vehicle battery
	Damaged motor	Replace the motor
	Frayed or broken wiring	Replace any damaged wiring
	ESC is shut down by heat protection circuit	Allow the ESC to cool down completely
Loss of vehicle control	Improper antenna placement	Ensure the transmitter antenna is not blocked and the receiver antenna is located properly
	Weak or no batteries in the transmitter or vehicle	Install a freshly charged vehicle battery and new transmitter batteries
	Neutral or trim position is incorrect	Adjust the steering trim
	Receiver and/or battery not connected properly	Check all receiver and battery connections
Steering and/or throttle function is reversed	Servo travel is reversed at the transmitter	Set the transmitter servo reversing switch to the correct position
	Motor wires are not connected properly	Check all motor wires for correct polarity and secure connection
ESC ON - No motor function, audible tone or LED	Battery/connection issue	Recharge/replace battery. Secure all connections
	Damaged ESC	Repair/replace ESC
	Damaged motor	Repair/replace
Motor- Stops and LED blinks	Low voltage protection	When the ESC LED blinks, recharge/replace battery
	Overheat protection	When the LED blinks, let motor/ESC cool, change set up or gearing to avoid overheating
Motor- Accelerates irregularly	Battery issue	Repair damaged wiring/replace battery
	Incorrect gearing	Adjust/replace gearing
	Worn or damaged motor	Repair/replace motor
Motor- Does not turn continuously in response to throttle	ESC/motor damaged	Repair/replace wiring or motor/ESC
Motor- Slows but will not stop	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure
Steering servo- Operates; motor does not run	Damaged motor	Test the motor apart from the vehicle system, repair/replace motor as needed
	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure
Steering/motor- not functioning	Low battery voltage	Recharge/replace
	Wrong model memory selected on transmitter	Select correct model settings on your transmitter, refer to transmitter and/or receiver manual
	Receiver not bound to transmitter	Bind transmitter to receiver, refer to transmitter and/or receiver manual
Vehicle- Does not operate at full speed	Battery issue	Recharge/replace
	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure

LIMITED WARRANTY

What this Warranty Covers

Horizon Hobby, LLC, (Horizon) warrants to the original purchaser that the product purchased (the "Product") will be free from defects in materials and workmanship for a period of 2 years from the date of purchase.

What is Not Covered

This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations or (vii) use that violates any applicable laws, rules, or regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER'S INTENDED USE.

Purchaser's Remedy

Horizon's sole obligation and purchaser's sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law

These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services

Your local hobby store and/or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions

or assistance, please visit our website at www.horizonhobby.com, submit a Product Support Inquiry, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services

If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at http://www.horizonhobby.com/content/service-center_render-service-center. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

NOTICE: Do not ship Li-Po batteries to Horizon. If you have any issue with a Li-Po battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements

For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service

Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of 1/2 hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website http://www.horizonhobby.com/content/service-center_render-service-center.

ATTENTION: Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender's choice and at the sender's expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

10/15

WARRANTY AND SERVICE CONTACT INFORMATION

COUNTRY OF PURCHASE	HORIZON HOBBY	CONTACT INFORMATION	ADDRESS
United States of America	Horizon Service Center (Repairs and Repair Requests)	servicecenter.horizonhobby.com/RequestForm/	2904 Research Rd Champaign, IL 61822
	Horizon Product Support (Product Technical Assistance)	productsupport@horizonhobby.com 877-504-0233	
	Sales	websales@horizonhobby.com 800-338-4639	
European Union	Horizon Technischer Service Sales: Horizon Hobby GmbH	service@horizonhobby.eu +49 (0) 4121 2655 100	Hanskampring 9 D 22885 Barsbüttel, Germany

FCC INFORMATION

FCC ID: BRWSPMSLR300 // BRWSPMSLT200F

SUPPLIER'S DECLARATION OF CONFORMITY

Axial SCX10 II Deadbolt SLT2 RTR (AXI03025)

FC This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Horizon Hobby, LLC
2904 Research Rd.,
Champaign, IL 61822
Email: compliance@horizonhobby.com
Web: HorizonHobby.com

IC INFORMATION

CAN ICES-3 (B)/NMB-3(B)

IC: 6157A-SPMSLR300 // 6157A-SPMSLT200F

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following 2 conditions:

1. This device may not cause interference.

2. This device must accept any interference, including interference that may cause undesired operation of the device.

COMPLIANCE INFORMATION FOR THE EUROPEAN UNION

CE EU COMPLIANCE STATEMENT:

Axial SCX10 II Deadbolt SLT2 RTR (AXI03025)

Hereby, Horizon Hobby, LLC declares that the device is in compliance with the following: EU Radio Equipment Directive 2014/53/EU; RoHS 2 Directive 2011/65/EU; RoHS 3 Directive - Amending 2011/65/EU Annex II 2015/863.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.horizonhobby.com/content/support-render-compliance>.

Wireless Frequency Range and Wireless Output Power

Transmitter

2410MHz—2480MHz
23.23dB

EU Manufacturer of Record:

Horizon Hobby, LLC
2904 Research Road
Champaign, IL 61822 USA

EU Importer of Record:

Horizon Hobby, GmbH
Hanskampring 9
22885 Barsbüttel Germany

WEEE NOTICE:




This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.



E328


EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE

**TRANSMISSION
GETRIEBE
TRANSMISSION
TRASMISSIONE**

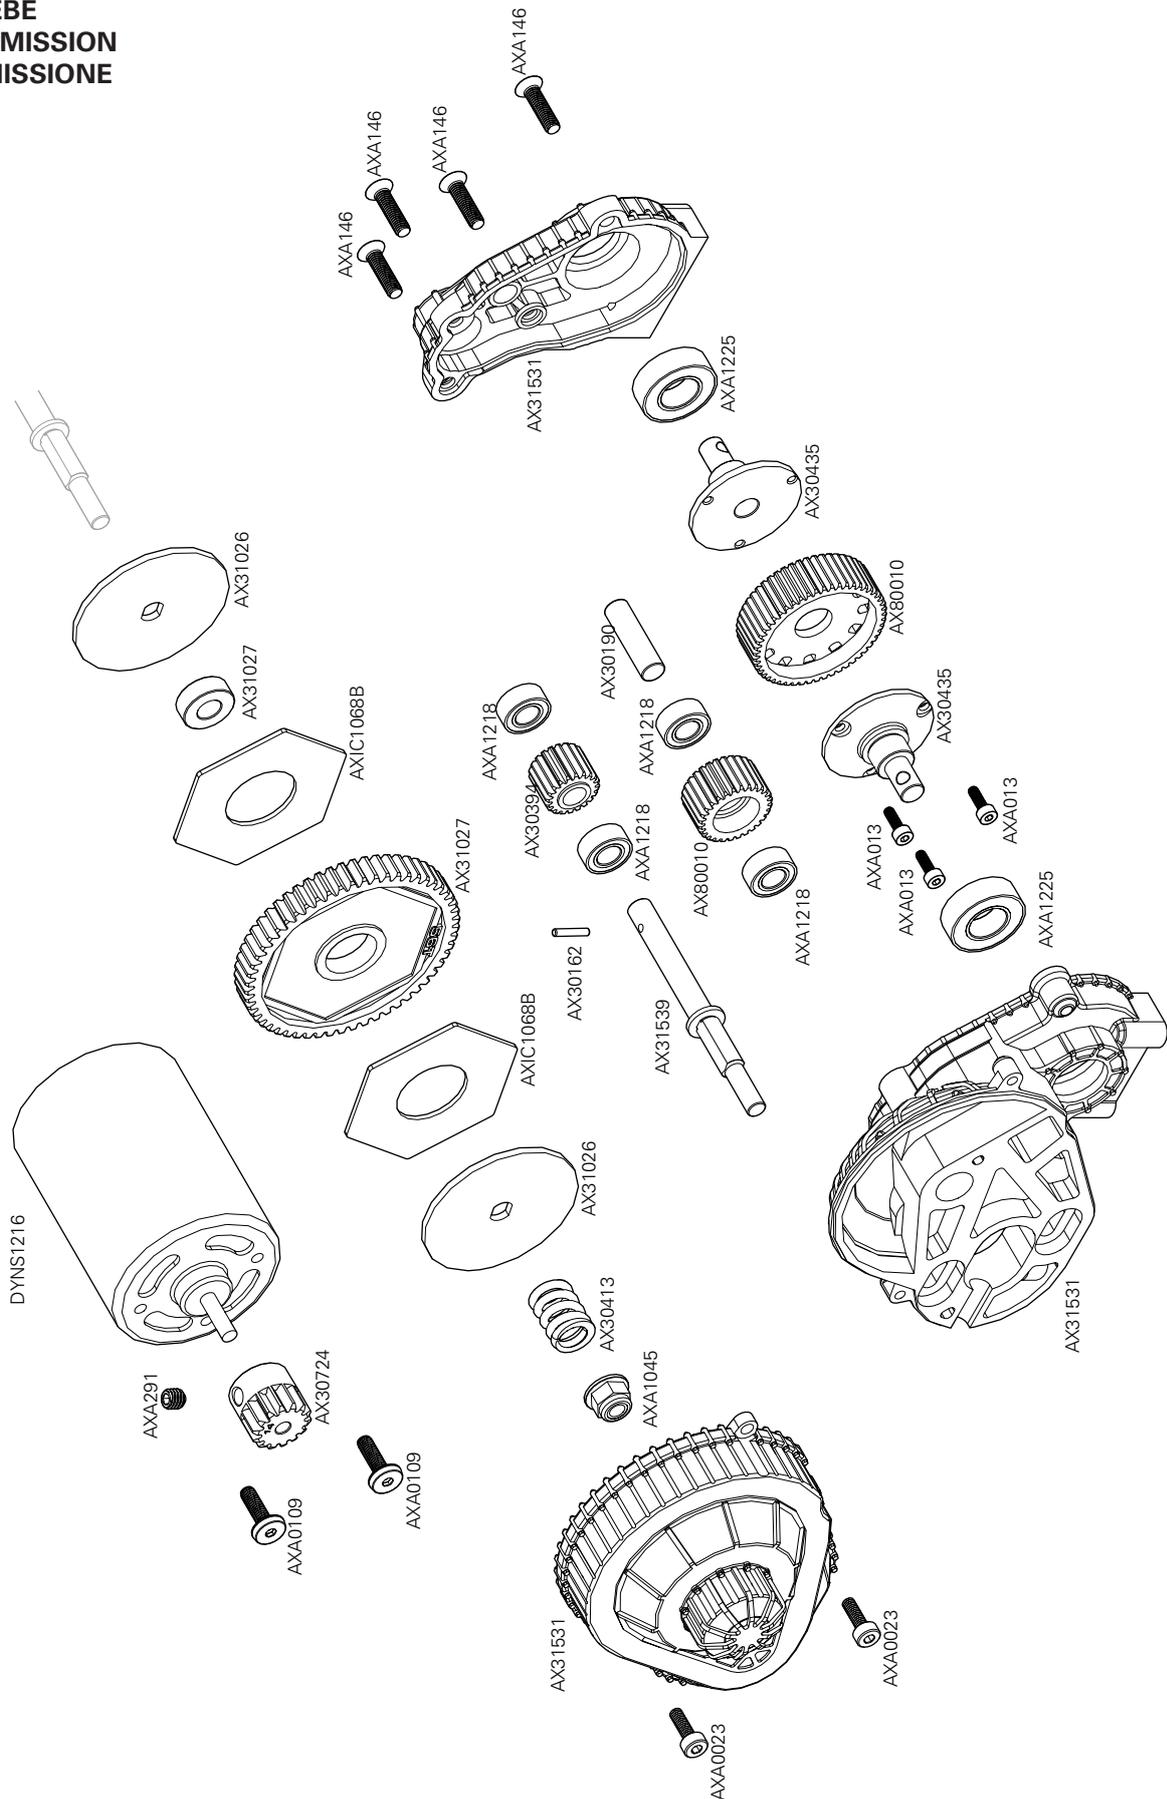


EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE

**CHASSIS
KAROSSERIE
CHÂSSIS
TELAIO**

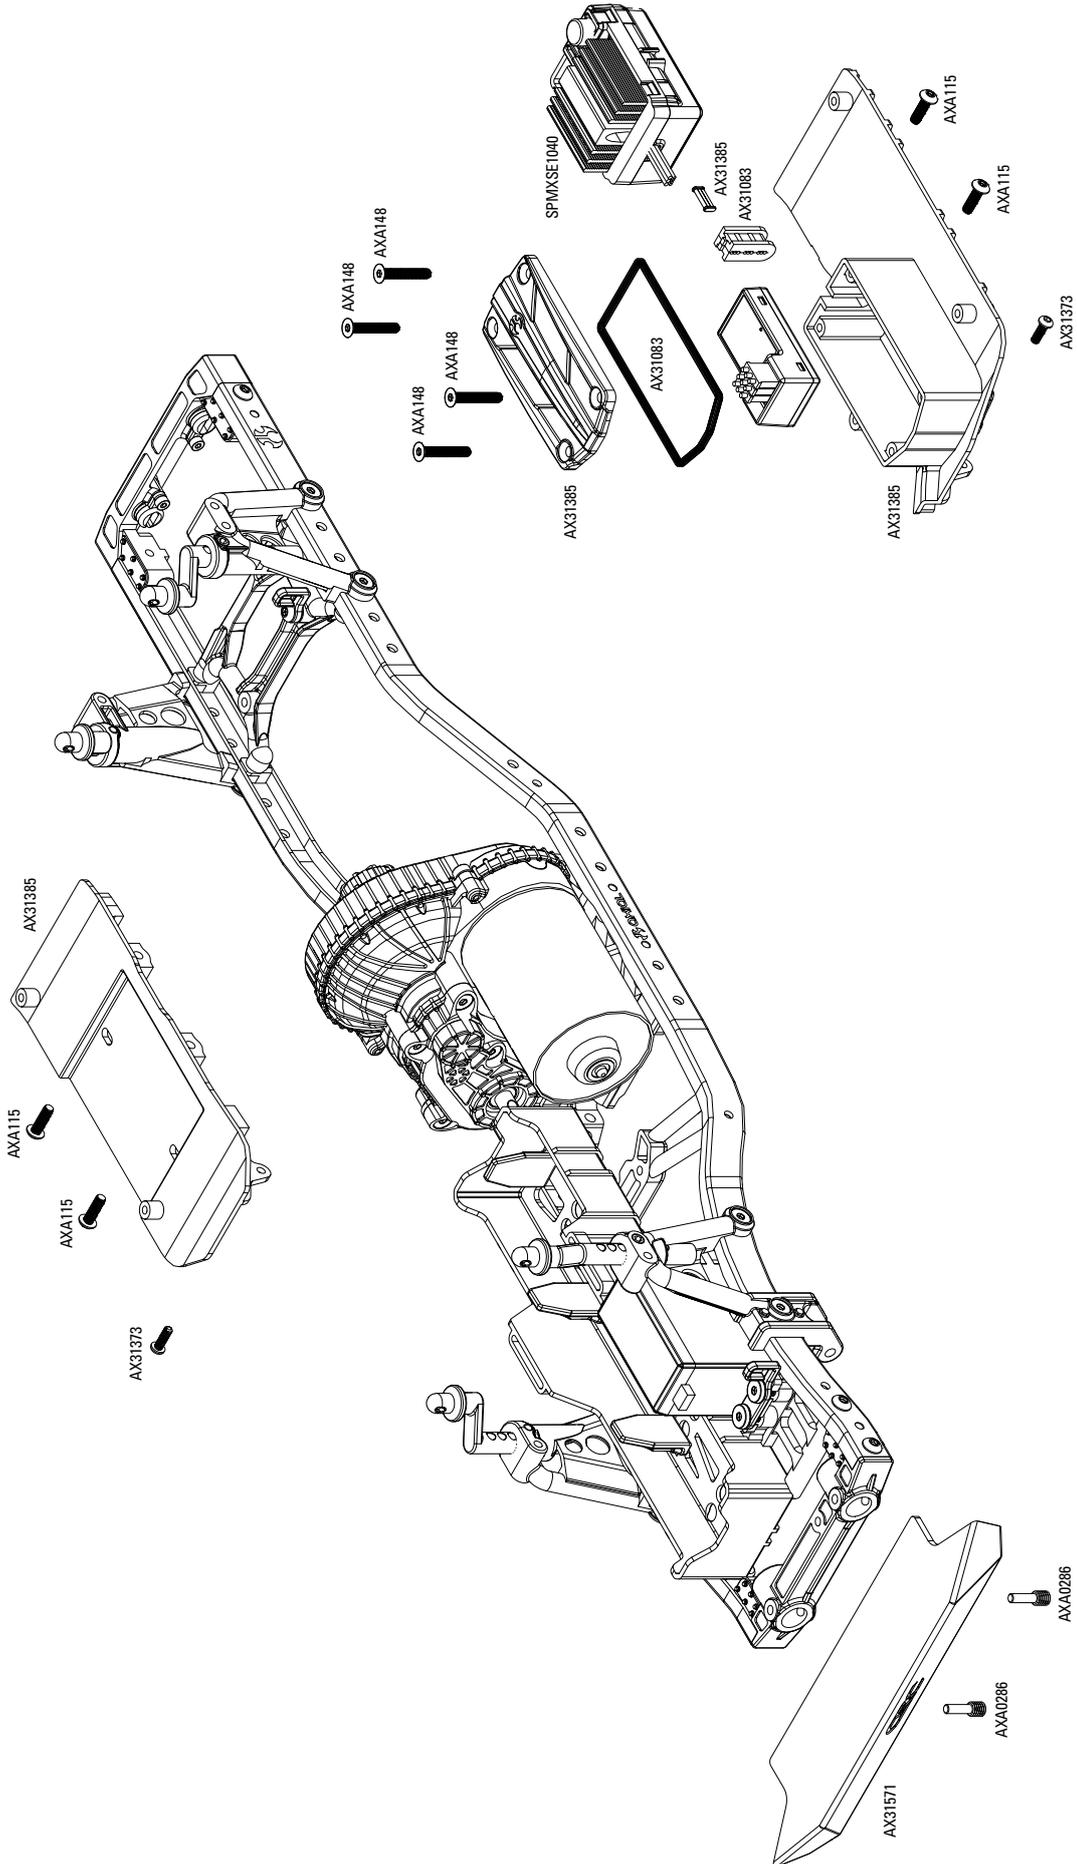

EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE

**BODY ASSEMBLY
KAROSSERIEMONTAGE
ENSEMBLE DE CARROSSERIE
GRUPPO CARROZZERIA**

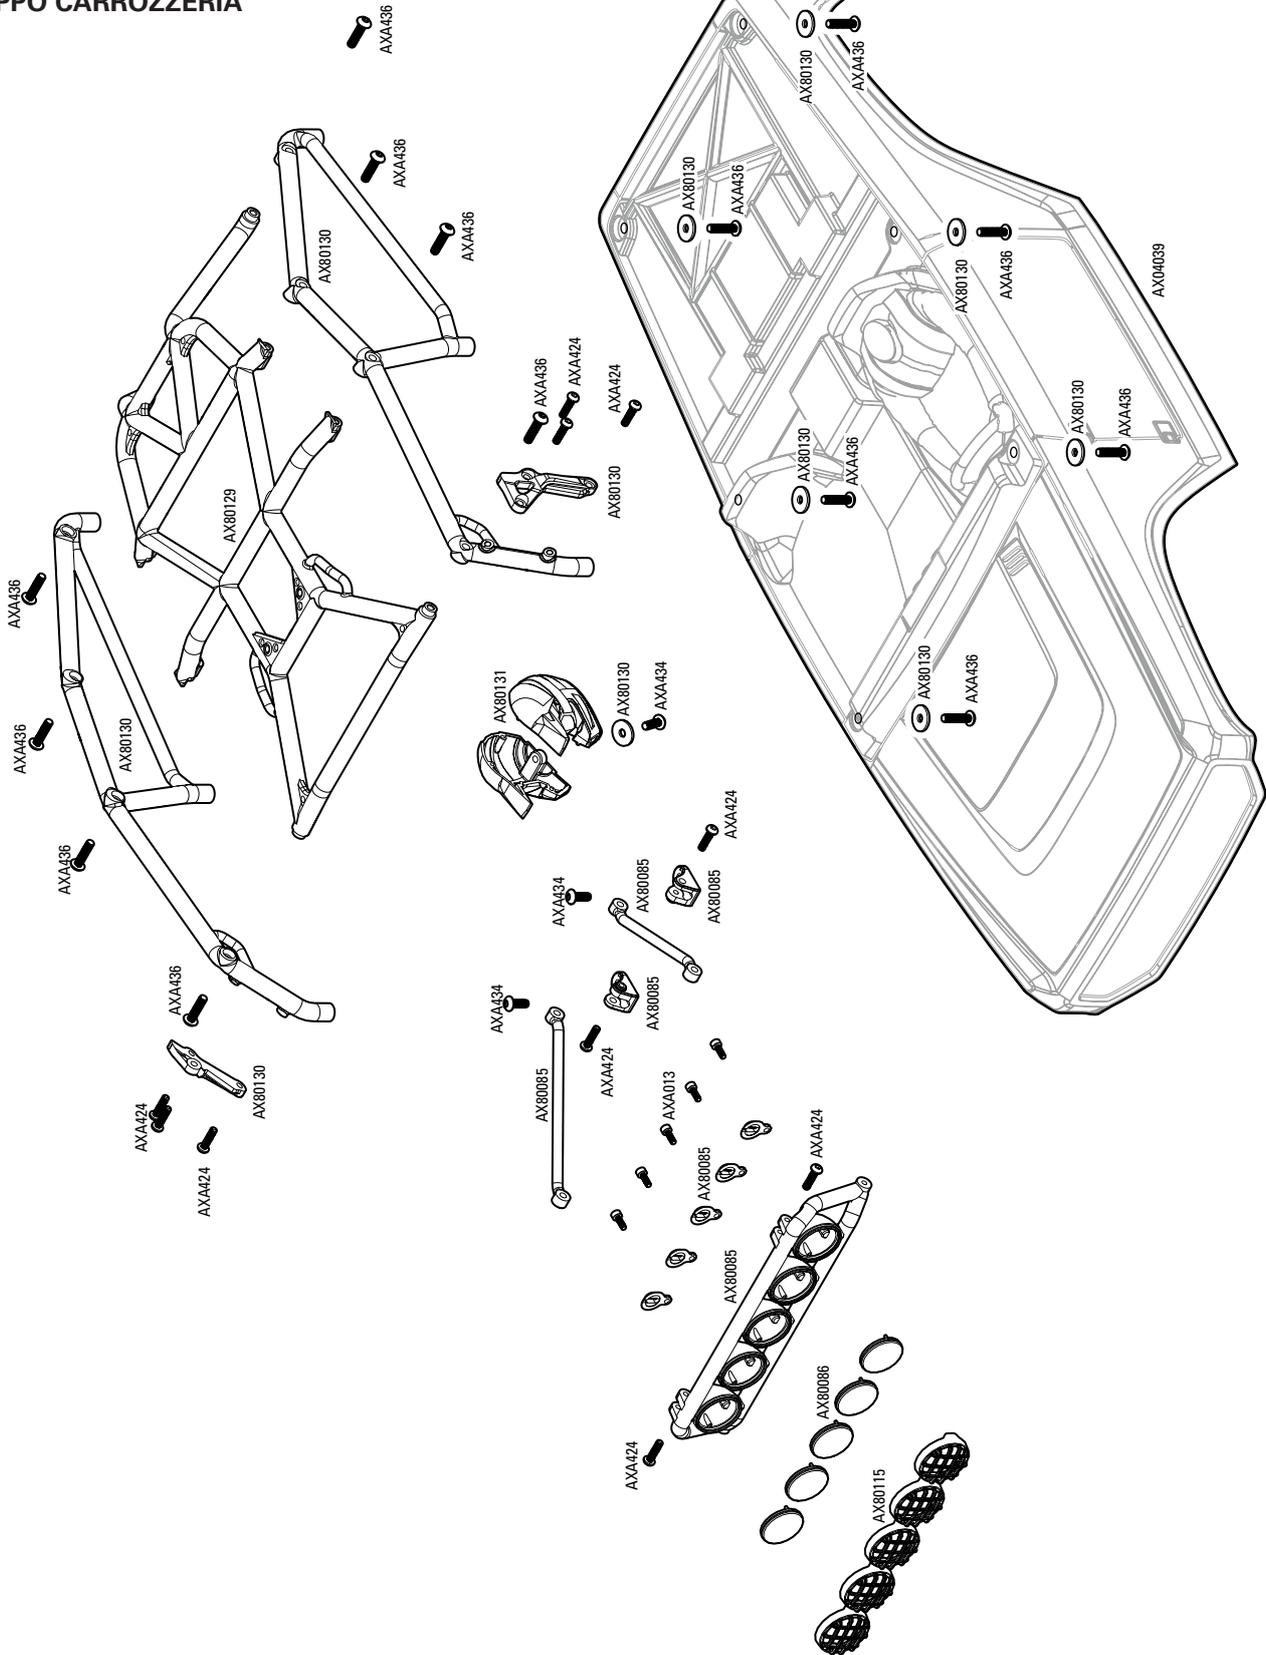

PARTS LISTS // TEILELISTEN // LISTE DES PIÈCES // ELENCO COMPONENTI

Part #	Description	Beschreibung	Description	Descrizione
AXIC0005	AXA0113 Hex Skt Butn Hd M3x6mm	AXA0113 Innensechskantschraube, Rundkopf, M3 x 6mm	AXA0113 Douille hexagonale à tête bombée M3 x 6 mm	AXA0113 Vite cil esag inc M3x6 mm
AXIC0012	AXA120 Hex Socket Btn Hd M3x25	AXA120 Innensechskantschraube, Rundkopf, M3 x 25	AXA120 Douille hexagonale à tête bombée M3 x 25	AXA120 Vite cil esag inc M3x25
AXIC0013	AXA013 Cap Hd M2x6mm Blk Oxide	AXA013 Kappenkopf M2 x 6mm, Schwarz, Oxid	AXA013 Vis d'assemblage creuse M2x6mm brunie	AXA013 Vit tst tnd M2x6mm nro os
AXIC0021	"Shock Parts, AX31576"	"Stoßdämpferteile, AX31576"	« Pièces de l'amortisseur, AX31576 »	"Parti amm, AX31576"
AXIC0023	AXA0023 Cap Head 2.6x8mm (10)	AXA0023 Kappenkopf 2,6 x 8mm (10)	AXA0023 Vis d'assemblage creuse 2,6 x 8 mm (10)	AXA0023 Vite tst tnd 2,6x8mm (10)
AXIC0041	AX30041 Hook/lp Strap 16x200mm	AX30041 Klettband 16 x 200mm	AX30041 Fermetures autoagrippantes 16 x 200 mm	AX30041 Fscct a strppo 16x200 mm
AXIC0114	AXA114 Hex Skt Butn Hd M3x8mm	AXA114 Innensechskantschraube, Rundkopf, M3 x 8mm	AXA114 Douille hexagonale à tête bombée M3 x 8 mm	AXA114 Vite cil esag inc M3x8 mm
AXIC0115	AXA115 Hex Skt Butn Head M3x10	AXA115 Innensechskantschraube, Rundkopf, M3x10	AXA115 Douille hexagonale à tête bombée M3 x 10	AXA115 Vite cil esag inc M3x10 mm
AXIC0116	AXA116 Hex Skt Butn Hd M3x12mm	AXA116 Innensechskantschraube, Rundkopf, M3 x 12mm	AXA116 Douille hexagonale à tête bombée M3 x 12 mm	AXA116 Vite cil esag inc M3x12 mm
AXIC0117	AXA117 Hex Skt Butn Head M3x15	AXA117 Innensechskantschraube, Rundkopf, M3x15	AXA117 Douille hexagonale à tête bombée M3 x 15	AXA117Vite cil esag inc M3x15 mm
AXIC0118	AXA144 Hex Flt Hd M3x8mm Blk10	AXA144 Innensechskantschraube, Flachkopf M3 x 8mm Schwarz 10	AXA144 Douille hexagonale à tête plate M3 x 8 mm noire 10	AXA144 Vit ptt esag M3x8mm nr (10)
AXIC0119	AXA1260 Hex Skt Tap Flt Hd 2.5	AXA1260 Innensechskantschraube, Flachkopf 2,5	AXA1260 Douille hexagonale taraudeuse à tête plate 2,5	AXA1260 Vite ptt esag inc 2.5
AXIC0120	AXA434 Hex Tap Butn Hd M3x8mm	AXA434 Innensechskantschraube, M3 x 8mm	AXA434 Douille hexagonale taraudeuse à tête bombée M3 x 8 mm	AXA434 Vite tst tnd esag M3x8 mm
AXIC0121	AXA435 Hex Tap Butn Hd M3x10mm	AXA435 Innensechskantschraube, M3 x 10mm	AXA435 Douille hexagonale taraudeuse à tête bombée M3 x 10 mm	AXA435 Vite tst tnd esag M3x10 mm
AXIC0123	AXA436 Hex Tap Butn Hd M3x12mm	AXA436 Innensechskantschraube, M3 x 12mm	AXA436 Douille hexagonale taraudeuse à tête bombée M3 x 12 mm	AXA436 Vite tst tnd esag M3x12 mm
AXIC0130	AXA468 Hex Skt Tap Flat Hd M3	AXA468 Innensechskantschraube, Flachkopf M3	AXA468 Douille hexagonale taraudeuse à tête plate M3	AXA468 Vite pitt esag inc M3
AXIC0146	AXA146 Hex Skt Flat Hd M3x12mm	AXA146 Innensechskantschraube, Flachkopf, M3 x 12mm	AXA146 Douille hexagonale à tête plate M3 x 12 mm	AXA146 Vite ptt esag inc M3x12 mm
AXIC0148	AXA148 Hex Skt Flat Hd M3x18mm	AXA148 Innensechskantschraube, Flachkopf, M3 x 18mm	AXA148 Douille hexagonale à tête plate M3 x 18 mm	AXA148 Vite ptt esag inc M3x18 mm
AXIC0176	AXA176 Screw Shaft M3x2.5x13mm	AXA176 Gewindeschaft M3x2,5x13mm	AXA176 Tige de vis M3 x 2,5 x 13 mm	AXA176 Albr filettato M3x2,5x13 mm
AXIC0180	AXA180 Set Screw M3x3mm Blk Ox	AXA180 Schraubensatz M3 x 3mm, Schwarz, Oxid	AXA180 Vis de fixation M3 x 3 mm brunie	AXA180 Grano M3x3 mm nero oss
AXIC0218	AXA1218 Bearing 5x10x4mm	AXA1218 Lager 5 x 10 x 4mm	AXA1218 Roulement 5 x 10 x 4 mm	AXA1218 Cuscinetto 5x10x4 mm
AXIC0221	AXA1221 Bearing 5x11x4mm	AXA1221 Lager 5 x 11 x 4mm	AXA1221 Roulement 5 x 11 x 4 mm	AXA1221 Cuscinetto 5x11x4 mm
AXIC0225	AXA1225 Bearing 8x16x5mm	AXA1225 Lager 8 x 16 x 5mm	AXA1225 Roulement 8 x 16 x 5 mm	AXA1225 Cuscinetto 8x16x5 mm
AXIC0230	AXA1230 Bearing 10x15x4mm	AXA1230 Lager 10 x 15 x 4mm	AXA1230 Roulement 10 x 15 x 4 mm	AXA1230 Cuscinetto 10x15x4 mm
AXIC0286	AXA0286 Screw Shaft M4x2.5x12	AXA0286 Gewindeschaft M4 x 2,5 x 12	AXA0286 Tige de vis M4 x 2,5 x 12	AXA0286 Alb filettato M4x2,5x12 mm
AXIC0291	AXA291 Set Scr M4x4mm Blk Ox(6)	AXA291 Schraubensatz M4 x 4mm Schwarz, Oxid (6)	AXA291 Vis de fixation M4 x 4 mm brunie (6)	AXA291 Set viti M4x4mm ner oss (6)
AXIC0392	AXA1392 E-clip E2 (10)	AXA1392 E-Clip E2 (10)	AXA1392 Attache en E E2 (10)	AXA1392 E-clip E2 (10)
AXIC0413	AX30413 Slipper Spring Black	AX30413 Gleitfeder Schwarz	AX30413 Ressort de sabot noir	AX30413 Molla slipper nera
AXIC0435	AX30435 Steel Outdrv Shaft Set	AX30435 Stahl-Flexwellenset	AX30435 Ensemble d'arbre de transmission extérieur en acier	AX30435 Set trascinatori acciaio
AXIC0724	AX30724 Pinion Gear 32p 13t	AX30724 Zahnradgetriebe 32P 13T	Engrenage à pignons 32p 13t AX30724	AX30724 Pignone 32P 13T
AXIC0795	AX31586 Wb8-hd Std Driveshafts	AX31586 WB8-HD Standard-Antriebswellen	AX31586 Arbres de transmission standard WB8-HD	AX31586 Alb trasmissione Wb8-hd std
AXIC0805	AX80030 Shock Body Set 61-90(2)	AX80030 Stoßdämpfergehäusesatz 61-90 (2)	AX80030 Ensemble de carrosserie d'amortisseur 61-90 (2)	AX80030 Set corpo amm 61-90 (2)
AXIC1009	AXA0109 Hex Skt Oversize M3x10mm	AXA0109 Innensechskantschraube, Übergroße, M3 x 10mm	AXA0109 Douille hexagonale surdimensionnée M3 x 10 mm	AXA0109 Vit ovrsz esg inc M3x10mm
AXIC1026	AX31026 Slipper Plate Washer	AX31026 Unterlegscheibe Gleiterplatte	AX31026 Rondelle de plaque de sabot	AX31026 Rondella piastra slipper
AXIC1027	AX31027 Spur Gear 32P 56T	AX31027 Stirnrad 32P 56T	AX31027 Engrenage cylindrique 32P 56T	AX31027 Corona 32P 56T
AXIC1028	AX31028 Pin 2.0x11mm (6)	AX31028 Stift 2,0 x 11mm (6)	AX31028 Goupille 2,0 x 11 mm (6)	AX31028 Perno 2,0x11 mm (6)
AXIC1045	AXA1045 Nylon Locknut M4 Black(10)	AXA1045 Nylon-Feststellmutter M4 Schwarz (10)	AXA1045 Contre-écrou en nylon M4 noir (10)	AXA1045 Ctrdad nylon M4 nero (10)
AXIC1053	AXA1053 Nylon Lock Hex Nut M3 (10)	AXA1053 Nylon-Sechskant-Feststellmutter M3 (10)	AXA1053 Contre-écrou à six pans en nylon M3 (10)	AXA1053 Ctrdad esag nylon M3 (10)

Part #	Description	Beschreibung	Description	Descrizione
AXIC1059	AXA1059 Body Clip 6mm Black(10)	AXA1059 Karosserieklemme 6mm Schwarz (10)	AXA1059 Clip de carrosserie 6 mm noir (10)	AX31231 Clip scocca 6 mm nero (10)
AXIC1068B	AX31068B Slpr Pad 32.8x15.2x1mm	AX31068B Gleitkissen 32,8 x 15,2 x 1mm	AX31068B Plaque de sabot 32,8 x 15,2 x 1 mm	AX31068B Pad slpr 32,8x15,2x1 mm
AXIC1070	AXA1070 Washer 3x6x0.5 (10)	AXA1070 Unterlegscheibe 3 x 6 x 0,5 (10)	AXA1070 Rondelle 3 x 6 x 0,5 (10)	AXA1070 Rondella 3x6x0,5 (10)
AXIC1083	AX31083 Radio Box Seal Yeti	AX31083 Funkbox-Dichtungen Yeti	AX31083 Joint du boîtier de radio Yeti	AX31083 Tenuta radio box Yeti
AXIC1086	AX80086 Light Bar Lenses Clear (5)	AX80086 Lichtstange, farblose Linsen (5)	AX80086 Lentilles transparentes de barre lumineuse (5)	AX80086 Lenti barra lumin trasp (5)
AXIC1115	AX80115 Light Bar Lens Grills	AX80115 Lichtstange, Linsengitter	AX80115 Grilles de lentille de barre lumineuse	AX80115 Griglie lenti barra lumin
AXIC1120	AX31120 Hex Skt Flat 3x10mm(10)	AX31120 Innensechskantschraube, Flachkopf, 3 x 10mm (10)	AX31120 Douille hexagonale plate 3 x 10 mm (10)	AX31120 Vit pt esag inc 3x10mm (10)
AXIC1145	AX31145 Sprng Yel 12.5x60mm(2)	AX31145 Feder Gelb 12,5 x 60mm (2)	AX31145 Ressort Jaune 12,5 x 60 mm (2)	AX31145 Molla gialla 12,5x60 mm(2)
AXIC1148	AX31148 Wb8-hd Drvshft Coupler	AX31148 WB8-HD-Antriebswellenkupplung	AX31148 Couplage d'arbre de transmission WB8-HD	AX31148 Accopp alb trasm Wb8-hd
AXIC1163	AXA1163 O-ring 7x1mm (10) *	AXA1163 O-Ring 7 x 1mm (10) *	AXA1163 Joint torique 7 x 1 mm (10) *	AXA1163 O-ring 7x1mm (10)*
AXIC1179	AXA1179 O-ring 2.5x1.5mm (10)	AXA1179 O-Ring 2,5 x 1,5mm (10)	AXA1179 Joint torique 2,5 x 1,5 mm (10)	AXA1179 O-ring 2,5x1,5 mm (10)
AXIC1180	AXA118 Hex Socket BtnHd M3x18mm(10)	AXA118 Innensechskantschraube, Rundkopf, M3 x 18mm (10)	AXA118 Douille hexagonale à tête bombée M3 x 18 mm (10)	AXA118 Vt cil esg inc M3x18mm(10)
AXIC1181	AXA119 Hex Socket Btn Hd M3x20(10)	AXA119 Innensechskantschraube, Rundkopf, M3 x 20 (10)	AXA119 Douille hexagonale à tête bombée M3 x 20 (10)	AXA119 Vt cil esag inc M3x20 (10)
AXIC1441	AX31441 Spring 12.5x60mm White (2)	AX31441 Feder 12,5 x 60mm Weiß (2)	AX31441 Ressort 12,5 x 60 mm blanc (2)	AX31441 Molla 12,5x60 mm bnc (2)
AXIC1471	AX31471 Axle 12x36mm (2)	AX31471 Achse 12 x 36mm (2)	AX31471 Essieu 12 x 36 mm (2)	AX31471 Assale 12x36 mm (2)
AXIC1472	AX31472 Solid Axle 6x73.5mm (2)	AX31472 Starrachse 6 x 73,5mm (2)	AX31472 Essieu solide 6 x 73,5 mm (2)	AX31472 Assale rigd 6x73,5 mm (2)
AXIC1481	AX31481 AE-5L LED Light Set Only	AX31481 Nur AE-5L LED-Beleuchtungssatz	AXIC1481 Ensemble d'éclairage LED, AE-5L uniquement	AXIC1481 Set luci LED AE-5L solo
AXIC1530	AX31530 AR44 Bevel Gear Set 30T/8T	AX31530 AR44 Kegelradgetriebeatz 30T/8T	AX31530 Ensemble d'engrenage conique AR44, 30T/8T	AX31530 Set ingr cnci AR44 30T/8T
AXIC1531	AX31531 Lcx Transmission Case	AX31531 LCX Getriebeabdeckung	AX31531 Boîtier de transmission LCX	AX31531 Scatola trasmissione Lcx
AXIC1536	AX31536 SCX10 II Steering Link	AX31536 SCX10 II-Lenkstange	AX31536 Tringlerie de direction SCX10 II	AX31536 Tirante sterzo SCX10 II
AXIC1540	AX31540 Flat Bed Insert Clear *	AX31540 Pritscheneinsatz durchsichtig *	AX31540 Insert plat transparent *	AX31540 Insetto pianale trasp*
AXIC1541	AX31541 1.9 Method MR307 Wheel	AX31541 1.9 Method MR307 Räder	AX31541 Roue MR307 1.9 Method	AX31541 Ruota 1.9 Method MR307
AXIC1552	AX31552 Lower Links SCX10 II	AX31552 Untere Stange SCX10 II	AX31552 Tringleries inférieures SCX10 II	AX31552 Tiranti inferiori SCX10 II
AXIC1588	AX31588 Body Mount Set	AX31588 Gehäusehalterungssatz	AX31588 Ensemble de montage de carrosserie	AX31588 Set supporti scocca
AXIC1589	AX31589 Diff Cover Red AR44	AX31589 Differentialabdeckung Rot AR44	AX31589 Cache de différentiel rouge AR44	AX31589 Coperchio diff rosso AR44
AXIC1590	AX31590 Batt Tray Servo Mount	AX31590 Akkuhalterung Servohalterung	AX31590 Support de batterie et servo	AX31590 Supp servo e vano batteria
AXIC1591	AX31591 Chassis Brace Set	AX31591 Karosseriestrebensatz	AX31591 Ensemble de support de châssis	AX31591 Set bretelle telaio
AXIC1592	AX31592 Axle Housing AR44	AX31592 Achsgehäuse AR44	AX31592 Carter d'essieu AR44	AX31592 Corpo assale AR44
AXIC2020	AX31565 1.9 Nitto Trail Grappler	AX31565 1.9 Nitto Trail Grappler	AX31565 Nitto Trail Grappler 1.9	AX31565 1.9 Nitto Trail Grappler
AXIC3014	AX30146 Shock Shaft 3x50 (2)	AX30146 Kolbenstange 3x50 (2)	AX30146 Bras d'amortisseur 3 x 50 (2)	AX30146 Albero amm 3x50 (2)
AXIC3042	AX30427 Alum Hub Nar 12mm Black(4)	AX30427 Alu Nabe eng 12mm schwarz (4)	AX30427 Moyeu étroit en aluminium 12 mm noir (4)	AX30427 Mzz alu strtti 12 mm ner(4)
AXIC3138	AX31380 Shock Hoops SCX10 II	AX31380 Stoßdämpfer SCX10 II	AX31380 Anneaux d'amortisseurs SCX10 II	AX31380 Telai amm SCX10 II
AXIC3162	AX30162 Pin 1.5x8mm (6)	AX30162 Stift 1,5 x 8mm (6)	AX30162 Goupille 1,5 x 8 mm (6)	AX30162 Perno 1,5x8 mm (6)
AXIC3163	AX30163 Pin 2.0x10 (6)	AX30163 Stift 2,0 x 10 (6)	AX30163 Goupille 2,0 x 10 (6)	AX30162 Perno 2,0x10 mm (6)
AXIC3185	AX31385 Side Plates SCX10 II	AX31385 Seitenplatten SCX10 II	AX31385 Plaques latérales SCX10 II	AX31385 Piastre laterali SCX10 II
AXIC3186	AX31186 Rod End Set 4mm	AX31186 Stangenkopfsatz 4mm	AX31186 Ensemble embout de bielle 4 mm	AX31186 Set teste a snodo 4 mm
AXIC3190	AX30190 Shaft 5x18 (2)	AX30190 Stange 5 x 18 (2)	AX30190 Arbre 5 x 18 (2)	AX30190 Albero 5x18 (2)
AXIC3373	AX31373 Hex Btnn Head M2.6x8mm (10)	AX31373 Sechskant-Rundkopf M2,6 x 8mm (10)	AX31373 Douille hexagonale à tête bombée M2,6 x 8 mm (10)	AX31373 Vt tst tnd esg M2,6x8mm(10)
AXIC3379	AX31379 Skid Plates SCX10 II	AX31379 Gleitbretter SCX10 II	AX31379 Plaques de protection SCX10 II	AX31379 Piastre laterali SCX10 II
AXIC3381	AX31381 AR44 Steering Knuckles	AX31381 AR44 Lenkrollen	AX31381 Rotules de direction AR44	AX31381 AR44 Fuso a snodo

Part #	Description	Beschreibung	Description	Descrizione
AXIC3394	AX30394 Drive Gear 20T	AX30394 Antriebszahnrad 20T	AX30394 Engrenage d'entraînement 20T	AX30394 Corona conica 20T
AXIC3398	AX31397 Wb8hd Shorty Drveshaft	AX31397 WB8-HD „Shorty“-Antriebswelle	AX31397 Arbre de transmission court WB8-HD	AX31397 Alb trasm corto Wb8hd
AXIC3399	AX31398 Cap Hd Screw M2.6x12mm (10)	AX31398 Inbusschraube M2,6 x 12mm (10)	AX31398 Vis d'assemblage creuse M2,6 x 12 mm (10)	AX31398 Vit tst cil M2,6x12mm (10)
AXIC3810	AX80010 Gear Set Scorpion Crawler	AX80010 Getriebesatz Scorpion Crawler	AX80010 Ensemble d'engrenages Crawler Scorpion	AX80010 Set ingr Scorpion Crawler
AXIC3818	AX80018 HardwareParts Tree Scorpion	AX80018 Hardware-Teile Tree Scorpion	AX80018 Arbre des pièces de quincaillerie Scorpion	AX80018 Parti bullon Tree Scorpion
AXIC4039	AX04039 Deadbolt Body Clear	AX04039 Deadbolt-Karosserie durchsichtig	AX04039 Carrosserie Deadbolt transparente	AX04039 Scocca Deadbolt trasp
AXIC4257	AX80045 Light Bucket Set Black	AX80045 Lichtschalen-Set Schwarz	AX80045 Ensemble de spots lumineux noir	AX80045 Set corpo fanale nero
AXIC4258	AX80049 LED Lens Set Yel/clr(4)	AX80049 LED-Linsenset Gelb/Transparent (4)	AX80049 Ensemble de lentilles LED jaune/transparent (4)	AX80049 Set lenti LED gialle/trasp(4)
AXIC4339	AX80129 Roll Cage Top AX10 Deadbolt	AX80129 Oberteil Überrollkäfig AX10 Deadbolt	AX80129 Cage de retournement supérieure AX10 Deadbolt	AX80129 Roll Cage Top AX10 Deadbolt
AXIC4340	AX80130 Roll Cage Sides	AX80130 Seitenteile Überrollkäfig	AX80130 Côtés de la cage de retournement	AX80130 Roll Cage lati
AXIC4403	AX31403 Bttn Hd Scrw M3x4x10mm (6)	AX31403 Rundkopfschraube M3x4 x 10mm (6)	AX31403 Vis à tête bombée M3 x 4 x 10 mm (6)	AX31403 Vit tst tond M3x4x10 mm (6)
AXIC4406	AX31406 Bearing 7x14x3.5mm (2)	AX31406 Lager 7 x 14 x 3,5mm (2)	AX31406 Roulement 7 x 14 x 3,5 mm (2)	AX31406 Cuscinetto 7x14x3,5 mm (2)
AXIC4407	AX31407 Bearing 5x14x5mm (2)	AX31407 Lager 5 x 14 x 5mm (2)	AX31407 Roulement 5 x 14 x 5 mm (2)	AX31407 Cuscinetto 5x14x5 mm (2)
AXIC4408	AX31408 AR44 Strgt Axle Shaft (2)	AX31408 AR44 Gerade Achswelle (2)	AX31408 Arbre de l'essieu droit AR44 (2)	AX31408 AR44 Albero assale drt (2)
AXIC4418	AX31418 Chassis Rails SCX10 II	AX31418 Karosserieschienen SCX10 II	AX31418 Rails de châssis SCX10 II	AX31418 Guide telaio SCX10 II
AXIC7079	AX8079 Hub Cover Set Black (4)	AX8079 Nabenabdeckungssatz Schwarz (4)	AX8079 JEnsemble de caches de moyeu noir (4)	AX8079 Set coprimozzo nero (4)
AXIC8031	AX80131 Skull Helmet Set	AX80131 Skull-Helmet-Satz	Ensemble casque tête de mort AX80131	AX80131 Kit casco Skull Helmet
AXIC8085	AX80085 Univ Mnt 5 Bckt Lt Bar	AX80085 Universal-Befestigung 5-schaliger Leuchtbalkensatz	AX80085 Univ Mnt 5 Bckt Lt Bar	AX80085 Barra lum 5 luci mont univ

ELECTRONICS // ELETTRONICA // COMPOSANTS ÉLECTRONIQUES // ELETTRONICA

Part #	Description	Beschreibung	Description	Descrizione
DYNS1216	35-Turn 540 Brushed Motor	540-Bürstenmotor mit 35 Turns	Moteur à balais 35-Turn 540	Motore a spazzole 35T 540
SPMRSLT200F	SLT2 2 Channel 2.4GHz Transmitter	SLT2 3-Kanal 2,4 GHz Sender	Émetteur SLT2 3 canaux 2,4 GHz	Trasmittente SLT2 3 Canali 2,4 GHz
SPMS614	S614 Metal Gear Servo 23T WP	S614 Metallgetriebe servo 23T WP	Servo à engrenages métalliques S614, 23 dents, étanche	Servo con ingranaggi in metallo S614 23T WP
SPMSLR300	SLR300 3CH 2.4Ghz SLT Receiver	SLR300 3-Kanal 2,4 Ghz SLT Empfänger	Récepteur SLR300 3 canaux 2,4 GHz SLT	Ricevitore SLR300 3 CH 2,4 Ghz SLT
SPMXSE1040	40A Brushed ESC	40 A Bürstengeschwindigkeitsregler	Variateur ESC à balais 40 A	ESC 40 Amp

RECOMMENDED PARTS // EMPFOHLENETEILE // PIÈCES RECOMMANDÉES // PARTI CONSIGLIATE

Part #	Description	Beschreibung	Description	Descrizione
DYNB37353	11.1V 3700mAh 3S 50CLiPo 96mmEC3	11,1V 3700mAh 3S 50CLiPo 96mmEC3	11,1V 3700mAh 3S 50CLiPo 96mmEC3	11,1V 3700mAh 3S 50CLiPo 96mmEC3
DYNB5025H3	7.4V 5000mAh 2S50C LiPo, Hardcase: EC3	7,4 V 5000 mAh 2S 50C LiPo, Hartschale: EC3	Li-Po 7,4 V 5000 mAh 2S 50C, boîtier : EC3	7,4 V 5000 mAh 2S 50C LiPo, hardcase: EC3
DYNB5035H3	11.1V 5000mAh 3S 50C LiPo,Hrds:EC3	11,1 V 5000 mAh 3S 50C LiPo, Hartschale: EC3	Li-Po 11,1 V 5 000 mAh 3S 50 C, boîtier : EC3	11,1 V 5000 mAh 3S 50C LiPo, hardcase: EC3
DYNC2030	Prophet Sport Mini 50W Charger	Prophet Sport Mini 50W Ladegerät	Chargeur Prophet Sport Mini, 50W	Caricabatterie Prophet Sport Mini, 50W
DYNC3015	P1 Mini AC Balance Char/ Dischar	Prophet Sport Mini AC Ladegerät	Chargeur Prophet Sport Mini, AC	Caricabatterie Prophet Sport Mini, AC
DYNC3016	Passport P2 2 Port AC/DC MultiCharger	Passport P2 2-Port-AC / DC-Multi-Ladegerät	Passport P2 Chargeur multiple AC / DC à 2 ports	Passport P2 Caricatore multiplo CA / CC a 2 porte
DYNC3017	Passport P4 AC/DC 4 Port Multicharger	Passport P4 4-Port-AC / DC-Multi-Ladegerät	Passport P4 Chargeur multiple AC / DC à 4 ports	Passport P4 Caricatore multiplo CA / CC a 4 porte
DYNS0900	Brushed Crawler Combo 35T	Gebürsteter Crawler Combo 35T	Brossé Crawler Combo 35T	Combo cingolato spazzolato 35T
SPMSS6250	S6250 U-T / H-S Digital HV WP Servo	S6250 U-T / H-S Digitales wasserdichtes Servo	S6250 U-T / H-S Servo étanche numérique	S6250 U-T / H-S Servo impermeabile digitale
SPMSS6280	S6280 U-T / H-S Digital HV WP Servo	S6280 U-T / H-S Digitales wasserdichtes Servo	S6280 U-T / H-S Servo étanche numérique	S6280 U-T / H-S Servo impermeabile digitale
SPMX50002S100H3	5000mAh 2S 7.4V Smart 100C; IC3	5000mAh 2S 7,4V Smart 100C; IC3	5000mAh 2S 7,4V Smart 100C; IC3	5000mAh 2S 7,4V Smart 100C; IC3
SPMX50002S30H3	5000mAh 2S 7.4V Smart 30C; IC3	5000mAh 2S 7,4V Smart 30C; IC3	5000mAh 2S 7,4V Smart 30C; IC3	5000mAh 2S 7,4V Smart 30C; IC3
SPMX50002S50H3	5000mAh 2S 7.4V Smart 50C; IC3	5000mAh 2S 7,4V Smart 50C; IC3	5000mAh 2S 7,4V Smart 50C; IC3	5000mAh 2S 7,4V Smart 50C; IC3
SPMX50003S100H3	5000mAh 3S 11.1V Smart 100C; IC3	5000mAh 3S 11,1V Smart 100C; IC3	5000mAh 3S 11,1V Smart 100C; IC3	5000mAh 3S 11,1V Smart 100C; IC3
SPMX50003S30H3	5000mAh 3S 11.1V Smart 30C; IC3	5000mAh 3S 11,1V Smart 30C; IC3	5000mAh 3S 11,1V Smart 30C; IC3	5000mAh 3S 11,1V Smart 30C; IC3
SPMX50003S50H3	5000mAh 3S 11.1V Smart 50C; IC3	5000mAh 3S 11,1V Smart 50C; IC3	5000mAh 3S 11,1V Smart 50C; IC3	5000mAh 3S 11,1V Smart 50C; IC3
SPMXC1000	Smart S1200 DC Charger, 1x200W	Smart S1200 Gleichstrom-Ladegerät, 1x200 W	Chargeur CC Smart S1200, 1x200 W	Caricabatterie Smart S1200 CC, 1x200 W
SPMXC1010	Smart S2100 AC Charger, 2x100W	Smart S2100 Gleichstrom-Ladegerät, 2x100 W	Chargeur CC Smart S2100, 2x100 W	Caricabatterie Smart S2100 CC, 2x100 W
SPMXC1050	Smart S1500 DC Charger, 1x500W	Smart S1500 Gleichstrom-Ladegerät, 1x500 W	Chargeur CC Smart S1500, 1x500 W	Caricabatterie Smart S1500 CC, 1x500 W
SPMXC1070	Smart S150 AC/DC Charger, 1x50W	Smart S150 Gleichstrom-Ladegerät, 1x50 W	Chargeur CC Smart S150, 1x50 W	Caricabatterie Smart S150 CC, 1x50 W
SPMXC1080	Smart S1100 AC Charger, 1x100W	Smart S1100 Gleichstrom-Ladegerät, 1x100 W	Chargeur CC Smart S1100, 1x100 W	Caricabatterie Smart S1100 CC, 1x100 W

OPTIONAL PARTS // OPTIONALE TEILE // PIÈCES FACULTATIVES // PARTI OPZIONALI

Part #	Description	Beschreibung	Description	Descrizione
AXI230025	Uni Body Post Set: SCX10 III	Universal-Gehäusestangensatz	Ensemble de poteaux de carrosserie universels	Set supporti carrozzeria universale
AXI231007	23T Metal Servo Horn	Servohorn, Metall 23T	Renvoi de commande de servo, métal 23T	Squadretta servo, Metallo 23T
AXI231015	Frame Rail Set: SCX10III	Rahmenschienensatz	Ensemble de rails du cadre	Set guida telaio
AXI332001	6-Bolt 27/8 Overdrive Gear Set	6-Schrauben-27/8-Overdrive-Zahnradatz	Ensemble d'engrenages d'overdrive à 6 boulons 27/8	Set di ingranaggi Overdrive 27/8 a 6 bulloni
AXIC0724	AX30724 Pinion Gear 32p 13t	AX30724 Zahnradgetriebe 32p 13t	AX30724 Engrenage à pignons 32p 13t	AX30724 Pignone 32p 13t
AXIC0725	AX30725 Pinion Gear 32p 14t	AX30725 Zahnradgetriebe 32p 14t	AX30725 Engrenage à pignons 32p 14t	AX30725 Pignone 32p 14t
AXIC0726	AX30726 Pinion Gr 32p 15t 3mm	AX30726 Zahnradgetriebe 32p 15t	AX30726 Engrenage à pignons 32p 15t	AX30726 Pignone 32p 15t
AXIC0727	AX30727 Pinion Gear 32p 16t	AX30727 Zahnradgetriebe 32p 16t	AX30727 Engrenage à pignons 32p 16t	AX30727 Pignone 32p 16t
AXIC7028	AX30728 Pinion Gear 32P 17T	AX30728 Zahnradgetriebe 32p 17t	AX30728 Engrenage à pignons 32p 17t	AX30728 Pignone 32p 17t
SPMXSE1060	Firma 60ASenseBL Smart Cr ESC	Firma 60 A bürstenloser Smart-Geschwindigkeitsregler	Variateur ESC sans balais 60 A Smart Firma	Smart ESC Firma 60 A Brushless
SPMXSEMC08	Firma Sense 1/10 Cr Sys Smart	Firma Sense 1/10 Stromversorgungssystem Smart	Firma Sense 1/10 système du pouvoir Smart	Firma Sense 1/10 sistema di alimentazione Smart
SPMXSM3001	Firma 2100kv BL Sense Cr Mot	FIRMA 2100 Kv bürstenloser Motor	Moteur sans balais 2 100 Kv FIRMA	Motore BL FIRMA 2100 Kv
SPMXSM3002	Firma 2800kv BL Sense Cr Mot	FIRMA 2800 Kv bürstenloser Motor	Moteur sans balais 2 800 Kv FIRMA	Motore BL FIRMA 2800 Kv



ADVENTURE ANYWHERE

facebook.com/axialinc | instagram.com/axialracing | twitter.com/axialrc
youtube.com/axialvideos | flickr.com/axialrc



©2022 Horizon Hobby, LLC.

Axial, the Axial logo, SCX-10, SLT2, IC3, EC3, Passport, and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC.

The Spektrum trademark is used with permission of Bachmann Industries, Inc. All other trademarks, service marks and logos are property of their respective owners.
US 9,930,567. US 10,419,970. US 10,849,013. Other patents pending.

Created 4/22

AXI03025

377047